



Deployment guidelines for Fumunda 10 KHZ

Pingers



The Fumunda pinger.

Pinger spacing's.

Pingers are to be spaced 100 metres apart along the net.

Pingers must be placed on the net at least 1 metre below the surface of the water and at least 1 metre clear of the bottom.

In situations where > 100 metres of net is used, say setting 125 metres off a bank, place one Pinger in the middle of the net and one Pinger on the seaward end.

When setting in offshore situations, your vessel at one end of the net is a good acoustic Pinger, so space the pingers at 100 metre intervals along the net ensuring a pinger is placed at the end of the net.

Activation

Fumunda pingers have a water activated switch, which just turns them on when they are submerged and turns them off when dry.

Battery Life

Fumunda pingers do not have rechargeable batteries, but the battery life is exceptionally long at 2 years. Battery cost at present is approximately \$15 Aus. (please contact Fumunda Marine)

Further Information Contact:

David Kreutz at OceanWatch Australia 07 5447949 mob0432683147

James Turner at Fumunda Marine 07 5450 2764 mob 0402003777