



# **Deployment guidelines for Fumunda 10 KHZ**

## **Pingers**



The Fumunda pinger.

### **Pinger spacing's.**

Pingers are to be spaced 100 metres apart along the net.

Pingers must be placed on the net at least 1 metre below the surface of the water and at least 1 metre clear of the bottom.

In situations where > 100 metres of net is used, say setting 125 metres off a bank, place one Pinger in the middle of the net and one Pinger on the seaward end.

When setting in offshore situations, your vessel at one end of the net is a good acoustic Pinger, so space the pingers at 100 metre intervals along the net ensuring a pinger is placed at the end of the net.

### **Activation**

Fumunda pingers have a water activated switch, which just turns them on when they are submerged and turns them off when dry.

### **Battery Life**

Fumunda pingers do not have rechargeable batteries, but the battery life is exceptionally long at 2 years. Battery cost at present is approximately \$15 Aus. ( please contact Fumunda Marine)

### **Further Information Contact:**

David Kreutz at OceanWatch Australia 07 5447949 mob0432683147

James Turner at Fumunda Marine 07 5450 2764 mob 0402003777